

# **Technical Data Atlas**

Dimensions, weight and mounting	
Dimensions (D x W x H) Weight DIN-rail	120 x 65 x 120 mm (width without side cover: 58 mm) 680 g 35 mm (minimal 50 mm wide)
Ambient conditions	
Operating temperature Storage temperature Relative air humidity Ingress protection	-20° 60° C -20° +85° C Maximum 98% IP 20 (DIN 40 050)
Power supply specifications	
Operating supply voltage Absolute maximum rated voltage Nominal power use Maximum power use Input current (24 VDC)  Reverse polarity protection Redundant power supply  Wire diameter Pluggable power supply connector	12 24 VDC 9 32 VDC 4.5 W 20 W Typ. 180 mA, maximum 840 mA  Yes No  < 2.5 mm² Pin - : 0 V Pin + : +24 VDC Pin SH : Shield  Installation notes: The device shall be supplied from an isolating transformer having a secondary Listed fuse rated either:  • Maximum 5 amps for voltages 12 20 V, or • Maximum 4 amps for voltages 21 24 V, or is supplied by a Class 2 power supply, or equivalent.
Ethernet	
Connector (Factory and Office) Maximum cable length Link speed MAC address Supported protocols  Default IP address after reset/purchase  Default login / password Connections	RJ-45 100 m or 328 ft 10 / 100/1000 Mbps Range: 9C:B2:06:2B:40:00 - 9C:B2:06:2D:3F:FF OPC UA, PROFINET (detect only), PROFINET I&MO, Modbus TCP (detect only), Ethernet/IP (detect only) Factory: 192.168.0.10 Office: 192.168.1.10 admin / admin Up to 20 concurrent web clients

# **Relay contact**

Input voltage/current Resistance

UL maximum contact rating

Maximum 220 VDC / 270 mA  $100 ... 150 m\Omega$  (including plug)

- 30 VDC, 2A, 60W
- 110 VDC, 0.3A, 33W
- 220 VDC, 0.27A, 60W
- 125 VAC, 0.5A, 62.5W
- 250 VAC, 0.25A, 62.5W

# **Installation notes:**

The device shall be supplied from an isolating transformer having a secondary Listed fuse rated either:

- maximum 5 amps for voltages 12 .. 20 V, or
- maximum 4 amps for voltages 21 .. 24 V,

or is supplied by a Class 2 power supply, or equivalent.

### SD Card

Types SD and SDHC Size Max. 32 GB

### **USB** ports

Type USB 2.0
Maximum output current 500 mA per port

# Others

MTBF To be defined

## **Quick Start instructions:**

- STEP 1 Install the device on a DIN rail.
- STEP 2 Connect the Office port to your laptop and the Factory port to the factory network. The factory side should NOT be connected to a mirror port of a switch.
- STEP 3 Connect the Atlas to a power supply. Wait until the green RDY LED is on.
- STEP 4 Set your laptops IP address to 192.168.1.1 and the netmask to 255.255.255.0.

- STEP 5 Open a web browser and go to https://192.168.1.10/. You will receive a warning about the certificate:
  - Chrome users should click 'ADVANCED followed by 'Proceed ..'
  - Internet Explorer/Edge users should click 'Continue to this website ..'
- STEP 6 Use user 'admin' and password 'admin' for the first login.
- STEP 7 Now complete the Setup Wizard but don't change the settings of Office port yet.
- STEP 8 Now setup the Office port in the Settings, unplug your laptop and connect the Office port to the office network.

PROCENTEC BV | Klopperman 16 | 2292 JD Wateringen | The Netherlands
T: +31 (0)174 671 800 | F: +31 (0)174 671 801 | E: support@procentec.com | W: www.procentec.com